



Quick Start — Unoriented Specimens

1. Remove screen from capsule.

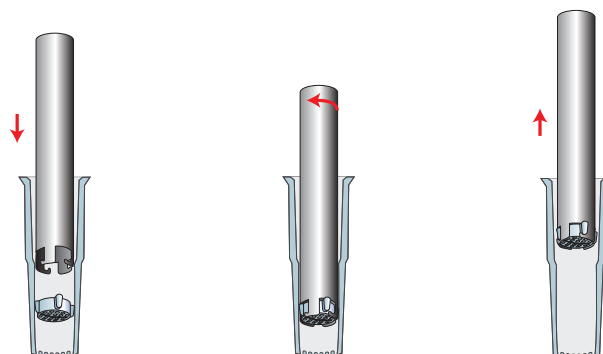


Twist tool
to lock screen

2. Load specimen and replace screen.

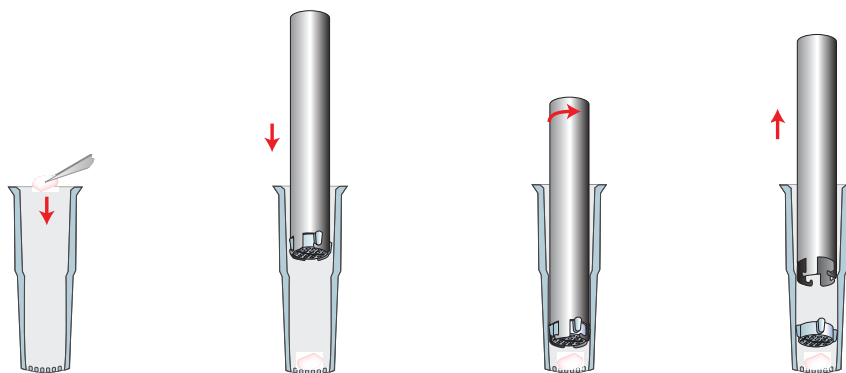


Twist tool
to release screen


3. Label capsule and process specimen.

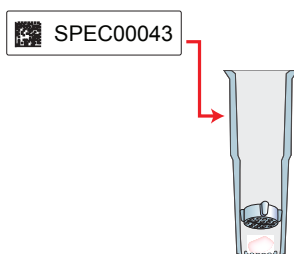

Apply label

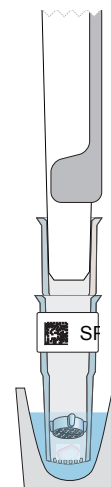

Attach pipettor
and process

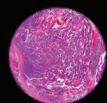

MICROSCOPY
INNOVATIONSTM LLC

213 Air Park Rd Suite 101
Marshfield WI 54449-8626
888.302.3925 or 715.384.3293
info@microscopyinnovations.com